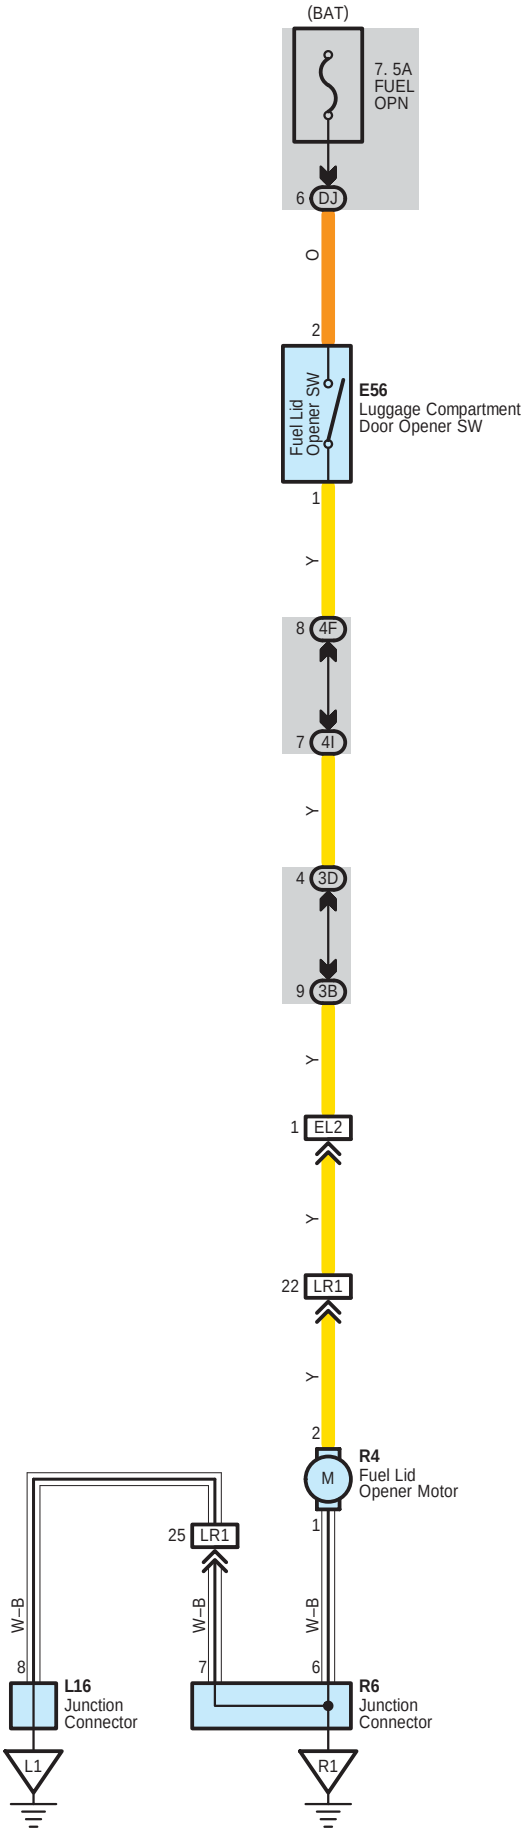
(BAT)
7. 5A
FUEL
OPN
6
DJ
O
2
Fuel Lid
Opener SW
E56
Luggage Compartment
Door Opener SW
1
Y
8
4F
7
4I
Y
4
3D
9
3B
Y
1
EL2
Y
22
LR1
Y
2
R4
Fuel Lid
Opener Motor
M
1
25
LR1
W–B
W–B
W–B
8
7
6
L16
Junction
Connector
R6
Junction
Connector
L1
R1

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
E56	59	R4	65		
L16	62	R6	65		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3B	36	Instrument Panel Wire and J/B No.3 (Instrument Panel Left)
3D		
4F	42	Instrument Panel Wire and J/B No.4 (Instrument Panel Right)
4I		
DJ	30	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EL2	69	Instrument Panel Wire and Floor Wire (Left Kick Panel)
LR1	70	Floor Wire and Luggage Room Wire (Roof Side Rear Inner Panel LH)

: Ground Points

Code	See Page	Ground Points Location
L1	70	Rear Pillar LH
R1	70	Roof Side Rear Inner Panel LH